



# The Cabinet Guy

## QuikDrawers




Before you begin  
Read all instructions carefully before you start  
Gather all necessary parts before beginning

### Step A.

Identify all parts of the slide

- a) drawer portion (removeable)
- b) middle portion
- c) cabinet portion
- d) release lever

Determine if you have frameless or face frame cabinet

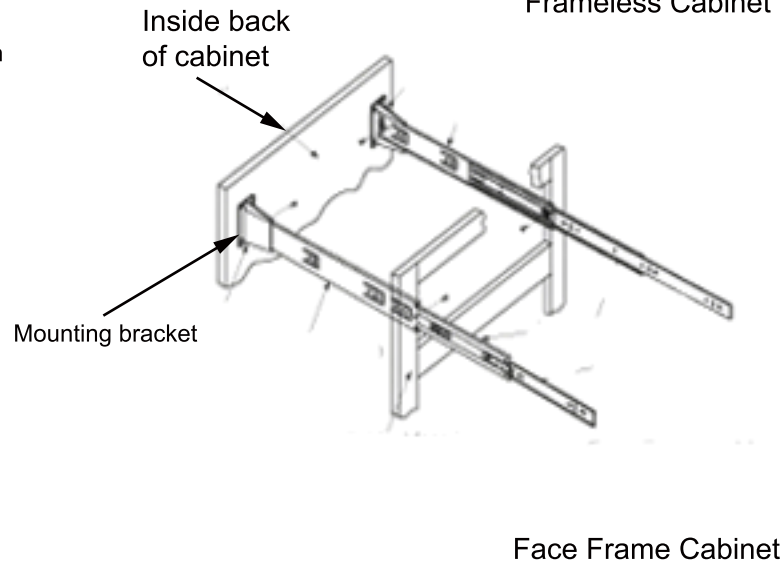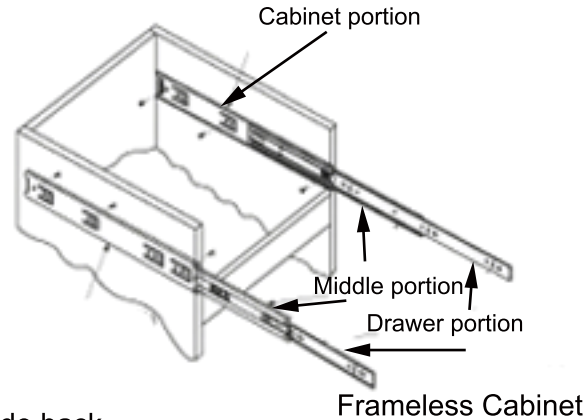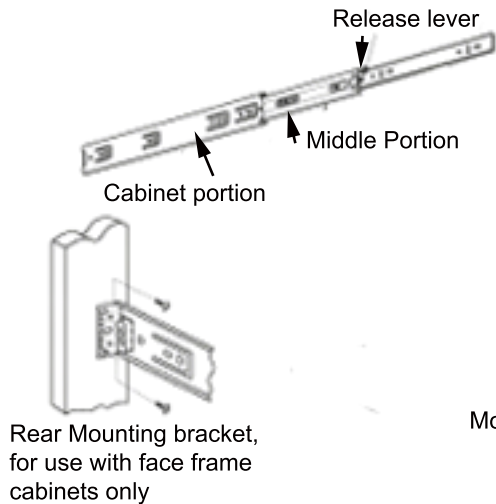

1930 W Cardinal Dr, Ste A


Beaumont, TX 77705

(409) 840-4474 or Toll Free (866) 937-7429

Visit us online [www.QuikDrawers.com](http://www.QuikDrawers.com)


### Step B

Verify that the difference between  
the drawer and the cabinet sides is  
1/2" on each side. (Maximum is 17/32)

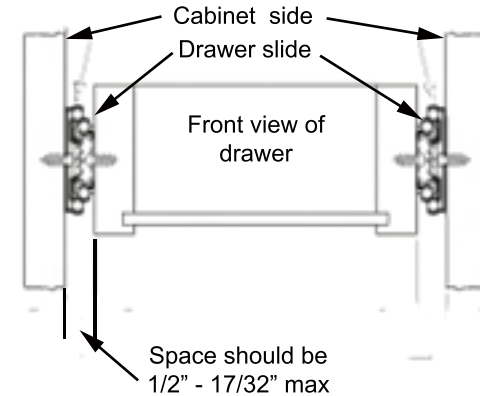

### Step C

Be sure that when  
deciding where to  
locate the drawer and  
front that you consider  
the clearances (C)  
between any case top  
and the drawer front or  
any doors and the  
drawer front.

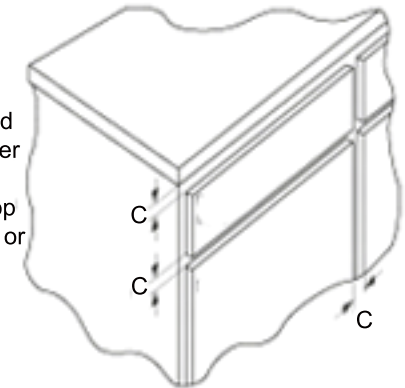



# The Cabinet Guy

## QuikDrawers

1930 W Cardinal Dr, Ste A  
Beaumont, TX 77705  
(409) 840-4474 or Toll Free (866) 937-7429  
Visit us online [www.QuikDrawers.com](http://www.QuikDrawers.com)


### Step D

By using the release lever, pull the drawer portion from the middle portion until it is completely removed.



Screw hole for face frame Release lever

Remove drawer portion →




### Step E

#### Frameless cabinet installation:

- mark a centerline on both the cabinet side and the drawer box
- attach cabinet portion to inside of cabinet as shown

### Frameless Cabinet


Be sure that the cabinet portion is set back 1/16" from the front edge of the cabinet

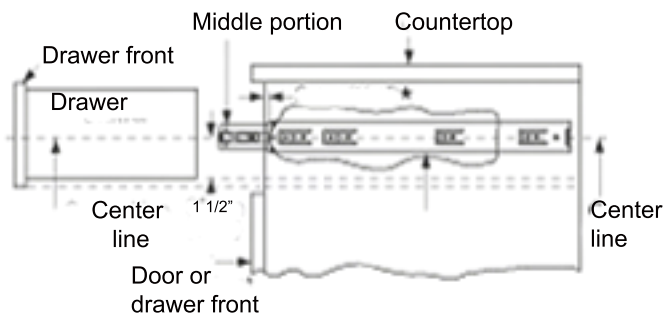

Attach drawer portion to the side of the drawer on the centerline as shown

### Face frame cabinet installation (cont'd)

#### Mount drawer portion flush with drawer front

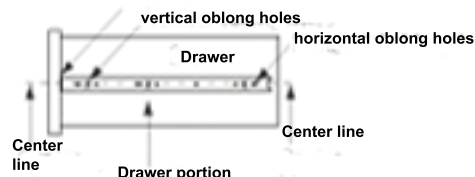


#### Tip:

Only use 2 screws in the oblong holes in the front and rear of the drawer portion. This will allow adjustments prior to using the round holes to lock position of drawer portion.

### Face frame cabinet installation:

#### Face Frame Cabinet

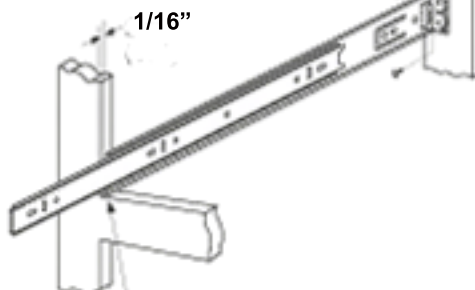


Mount cabinet portion into the corner of cabinet face frame.

Be sure that the cabinet portion is set back 1/16" from front edge of face frame

### Face frame cabinet installation (cont'd)

- attach the drawer portion of the slide to the drawer on center line as illustrated below.
- slide the mounting bracket onto the rear of the cabinet portion and slide the drawer portion mounted on the drawer into the middle portion and all the way to the closed position.
- place the mounting bracket on the rear inside cabinet wall and mark the placement with a pencil.
- pull drawer back out and align the mounting brackets with the pencil lines and attach to rear wall with screws.
- slide drawer portions mounted on the drawer into the middle portion and push all the way closed. This may be a bit stiff the first time. Do NOT force it in.

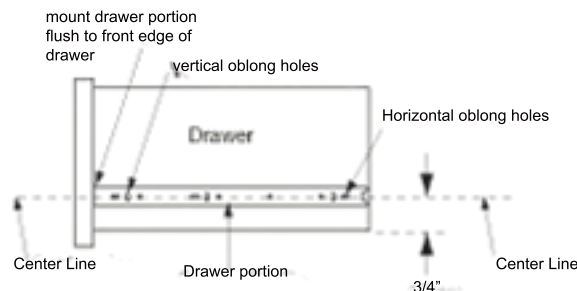

#### Tip:

Use only 2 screws in the front and rear oblong holes, allowing for adjustments. Use round holes to "lock" this portion in place.

### Step F

- check the drawer alignment and all the clearances before you tighten all parts in place.
- drawer insertion: Be certain that the ends of the drawer portions pass through the black plastic guides on the middle portion of the slide, allowing the tapered end of the drawer portion to pass in between the ball bearings on the retainer. Push the drawer all the way in. Be mindful of the resistance. This will be easier after the initial use and insertion.
- drawer should move freely without binding
- installation is now complete.

- Drawers should move smoothly without any binding.
- Installation is now complete.