

Cutting Board Frame

Installation Instructions for countertop installation of Vance Industries' Cutting Boards

CAUTION! Do NOT INSTALL ABOVE DISHWASHER.

1. Determine Location (figure a)

Examine the surface under counter for interference by bracing or cross members. Area must have additional 3/4" space around cut-out for fastening lugs.

2. Scribe And Cut Countertop (figure b)

Place the frame on the countertop, vertical flange down. Draw line around the outside of the flange, not around top of rim.

Use one starting hole and make the cutout with a keyhole saw.

3. Preparing Frame For Installation (figure c)

Applying caulking under both sides of frame and place over cutting board. Make sure to install tempered glass cutting board with textured side facing up.

4. Installing Cutting Board (figure d)

Place cutting board and frame in cutout. Place plastic bolt pads over tip of each bolt. Attach one lug close to each corner. Evenly space remaining lugs, keeping them at least 2" away from weld. Do not over tighten.

WARRANTY

Vance promises to replace within one year from date of purchase, any Surface-Saver® exclusive of labor, that breaks from temperature extremes or whose surface becomes scratched or marred under normal household use.

Figure A

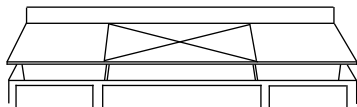


Figure B

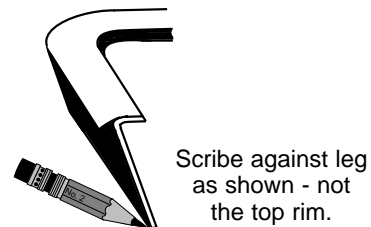


Figure C

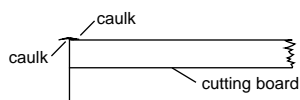


Figure D

